

# ad notam

 **IMPORTANT**

Make sure this unit is installed in a sufficiently ventilated place.

**A minimal distance of 200 mm from walls and air flow around all 4 sides and the top of the power adaptor must be guaranteed!**

Failing to do so will dramatically reduce lifetime of the unit and warranty claims will be refused.

