


## INTERACTIVE MULTIMEDIA SOLUTIONS

### INTERFACE CONNECTION OVERVIEW ad notam® - ENSEO

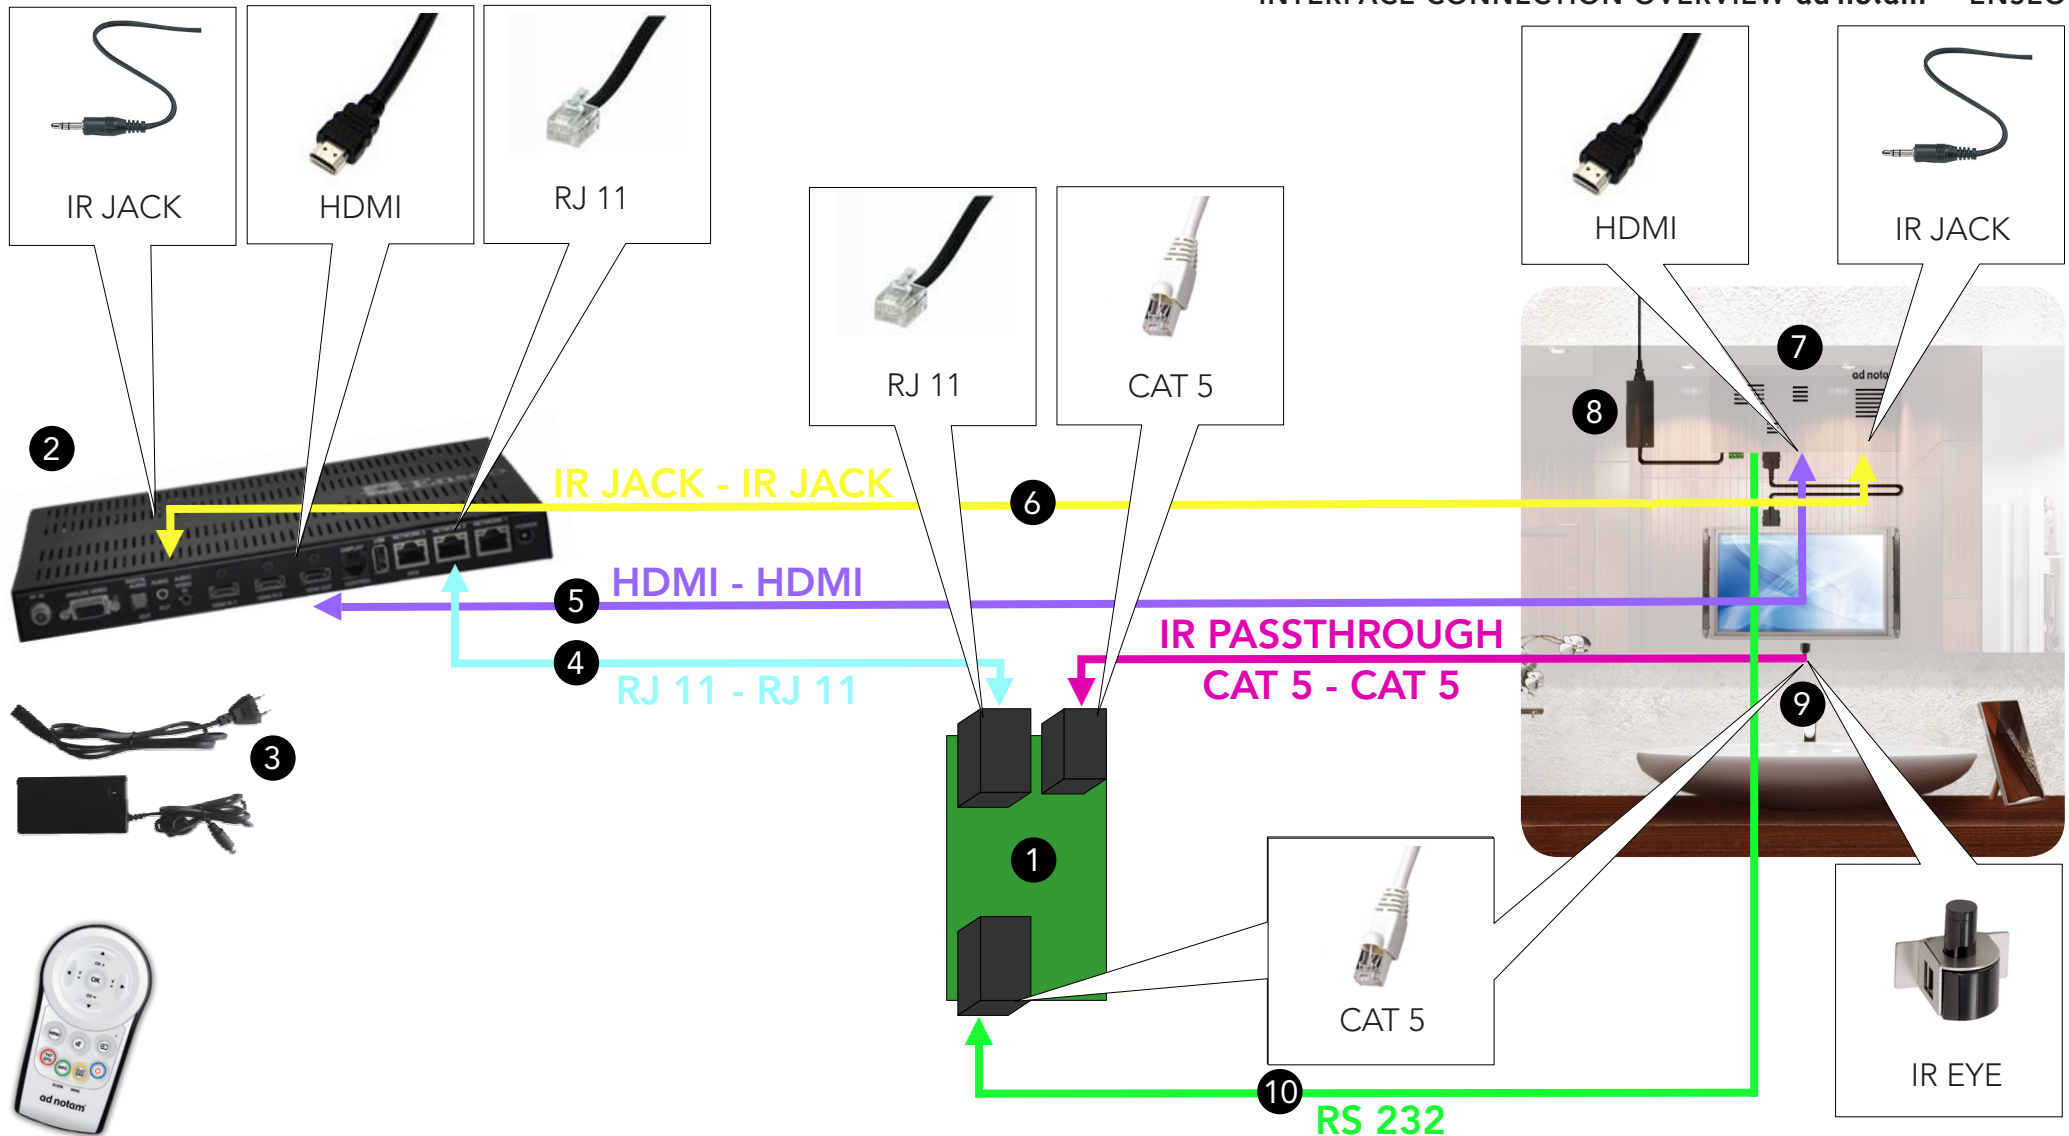

## INTERACTIVE MULTIMEDIA SYSTEMS

COMPONENTS ad notam® - ENSEO

#	Provider	Product	Type	Connections
1	ENSEO	Interface Board	Interface PCB Splitter	ENSEO Set Top Box (RJ 11 Input) <b>ad notam</b> ® IR Eye (RJ 45 Input) <b>ad notam</b> ® Input Box (RJ 45 Input)
2	ENSEO	Set Top Box	Set Top Box	Interface Board (RJ 11 Input) <b>ad notam</b> ® Input Box (HDMI™ Input) <b>ad notam</b> ® Input Box (IR Output)
3	ENSEO	Power Supply for Set Top Box incl. Power Cord	Power Supply	ENSEO Set Top Box (DC 12V Input) Mains Socket
4	ENSEO	Data Cable between Interface Board and Set Top Box, Length <b>tbd</b>	RJ 11 - RJ 11 Cable	Interface Board (RJ 11 Input) ENSEO Set Top Box (RJ 11 Input)
5	ENSEO	Commercial HDMI™ Cable between Set Top Box and Controller Unit, Length 1.500mm	HDMI™ - HDMI™ Cable	ENSEO Set Top Box (HDMI™ Input) <b>ad notam</b> ® Input Box (HDMI™ Input)
6	ENSEO	IR Jack Cable	IR Jack - IR Jack Cable	<b>ad notam</b> ® Input Box (IR Output) ENSEO Set Top Box (IR Input)
7	<b>ad notam</b> ®	Flat Panel Display with external Controller Unit (Input Box) incl. CCH 36pin Connection Cable	Monitor System	Interface Board (RJ 45 Input) ENSEO Set Top Box (HDMI™ Input) ENSEO Set Top Box (IR Input)
8	<b>ad notam</b> ®	66W / 5.5A Power Supply for Monitor System incl. Power Cord, Length 720mm	Power Supply	<b>ad notam</b> ® Input Box (DC 12V Input) Mains Socket
9	<b>ad notam</b> ®	Infrared Remote Control Receiver incl. RJ 45 Patch Cable, Length <b>tbd</b>	Remote Control Receiver	<b>ad notam</b> ® IR Eye (RJ 45 Input) Interface Board (RJ 45 Input)
10	<b>ad notam</b> ®	Moulded Commercial Cable between Interface Board and Input Box, Length 500mm	RJ 45 - RJ 45 Cable	Interface Board (RJ 45 Input) <b>ad notam</b> ® Input Box (RJ 45 Input)

## INTERACTIVE MULTIMEDIA SOLUTIONS

SERIAL CONNECTION CABLE ad notam® - ENSEO

