


INTERACTIVE MULTIMEDIA SOLUTIONS

INTERFACE CONNECTION OVERVIEW ad notam® - VDA POWER TV

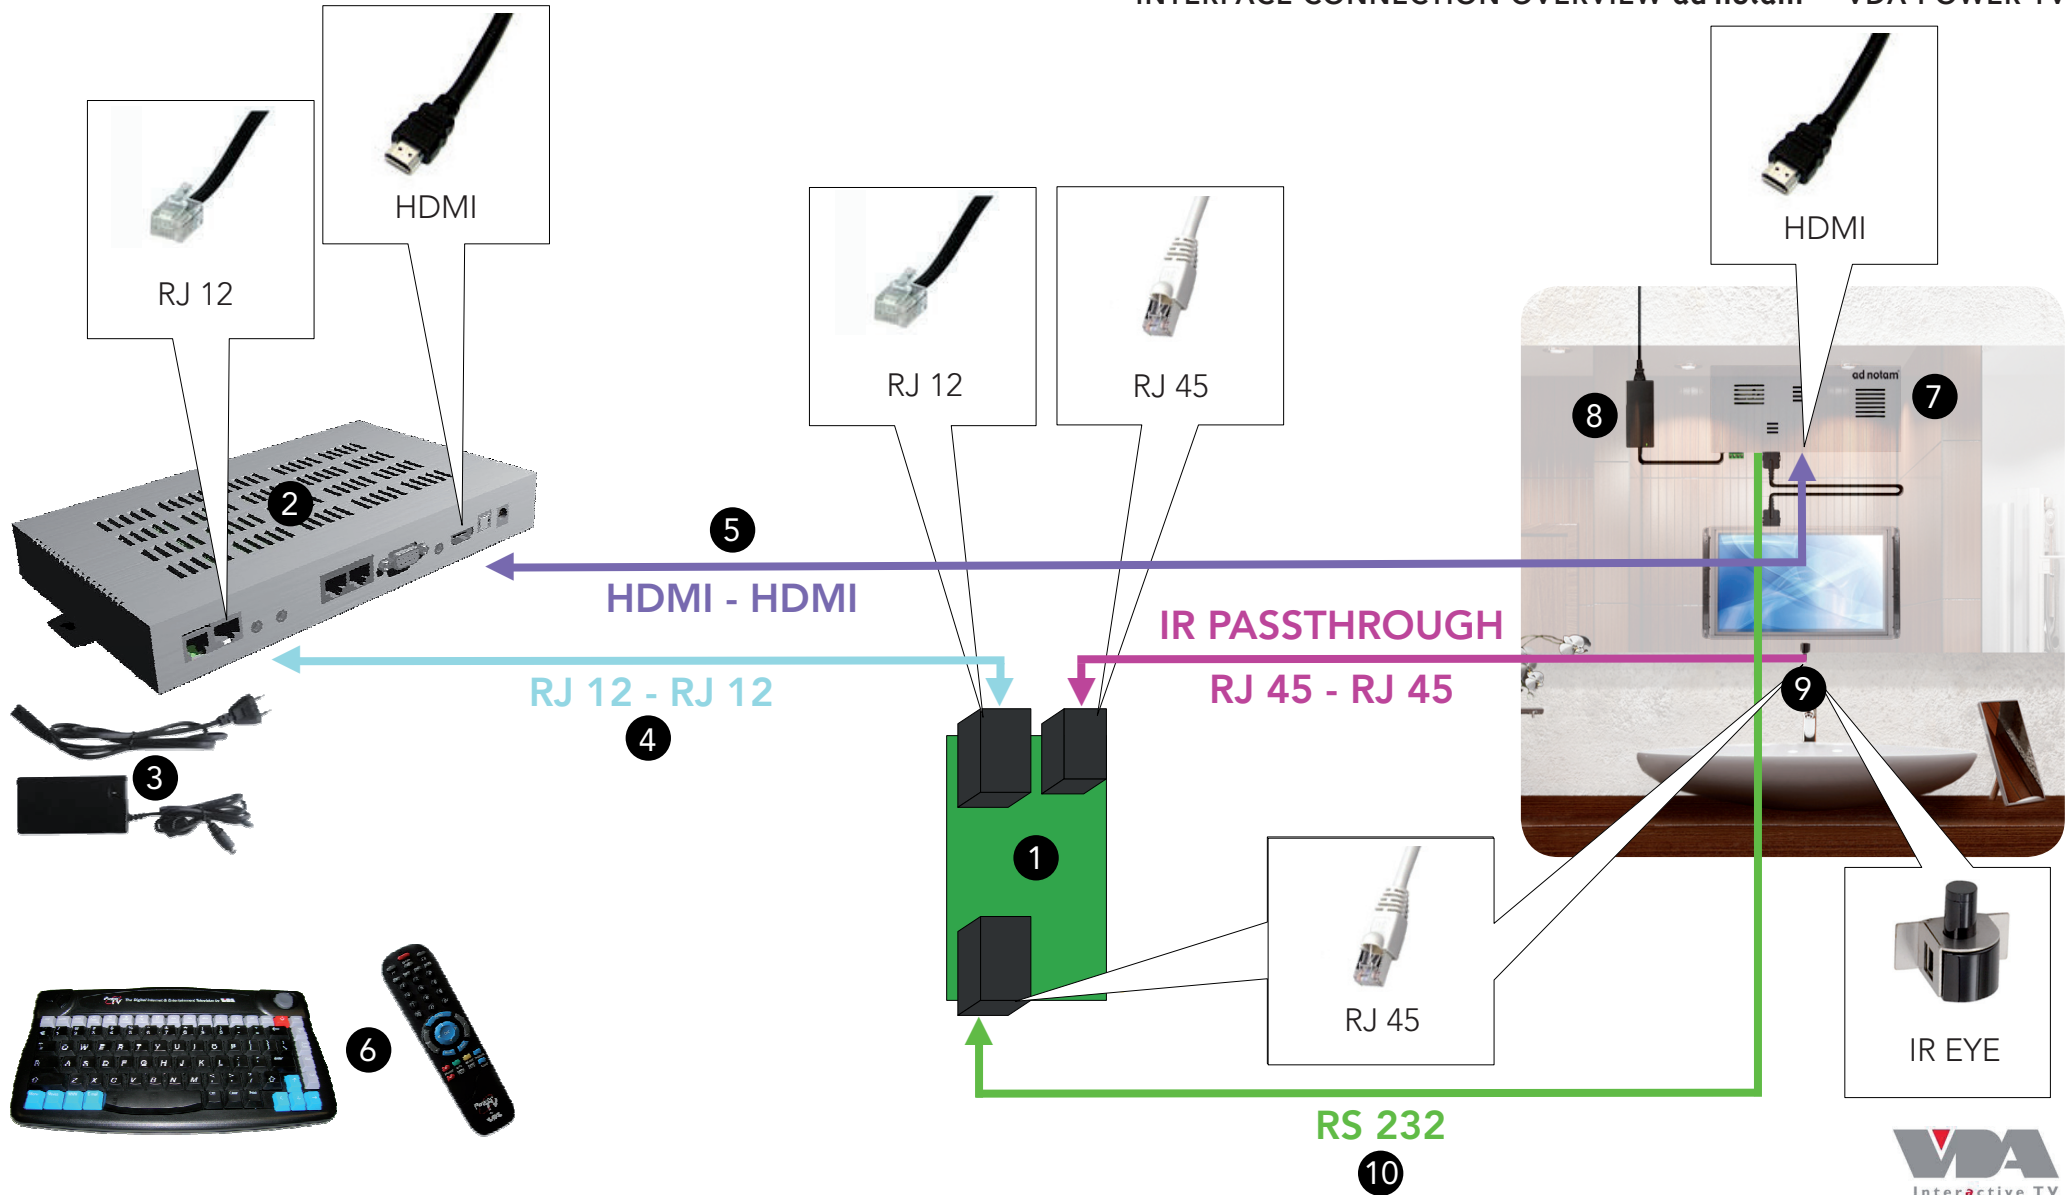

INTERACTIVE MULTIMEDIA SYSTEMS

COMPONENTS ad notam® - VDA POWER TV

| # | Provider | Product | Type | Connections |
|----|------------------|--|-------------------------|--|
| 1 | VDA | Interface Board | Interface PCB Splitter | VDA SBB HD (RJ 12 / DATA 1 Input) ad notam® IR Eye (RJ 45 Input) ad notam® DTV LINE™ (RJ 45 Input, RS 232) |
| 2 | VDA | SBB HD | Set Top Box | Interface Board (RJ 12 / SBB-RS 232 Input) ad notam® DTV LINE™ (HDMI™ Input) |
| 3 | VDA | Power Supply for Set Top Box incl. Power Cord | via Controller Unit | VDA SBB HD (DC 12V Input) Mains Socket |
| 4 | VDA | Customized Data Cable between Interface Board and SBB HD, Length tbd | RJ 12 - RJ 12 Cable | Interface Board (RJ 12 / SBB-RS 232 Input) VDA SBB HD (RJ 12 / DATA 1 Input) |
| 5 | VDA | Commercial HDMI™ Cable between DTV LINE™ and SBB HD, Length 1.500mm | HDMI™ - HDMI™ Cable | VDA SBB HD (HDMI™ Input) ad notam® DTV LINE™ (HDMI™ Input) |
| 6 | VDA | Infrared Remote Control | Remote Control | n.a. |
| 7 | ad notam® | DTV LINE™ Controller Unit with 17.3" Flat Panel Display incl. CCH 36pin Connection Cable | Monitor System | Interface Board (RJ 45 / TV Link Input, RS 232) VDA SBB HD (HDMI™ Input) |
| 8 | ad notam® | 66W / 5.5A Power Supply for Monitor System incl. Power Cord, Length 720mm | Power Supply | ad notam® DTV LINE™ (DC 12V Input) Mains Socket |
| 9 | ad notam® | Infrared Remote Control Receiver incl. RJ 45 Patch Cable, Length tbd | Remote Control Receiver | ad notam® IR Eye (RJ 45 Input) Interface Board (RJ 45 Input) |
| 10 | ad notam® | Moulded Commercial Cable between Interface Board and DTV LINE™, Length 500mm | RJ 45 - RJ 45 Cable | Interface Board (RJ 45 / TV Link Input, RS 232) ad notam® DTV LINE™ (RJ 45 Input, RS 232) |

INTERACTIVE MULTIMEDIA SOLUTIONS

SERIAL CONNECTION CABLE ad notam® - VDA POWER TV

